

USB Blaster V2

- 1.1 Interfaces
- 2.1 User Guide
- 3.1 Driver



Welcome to [Wvshare.Com](http://www.Wvshare.Com)
for Easy, Fast & Safe online purchase!

1.1 Interfaces

Supported Interface & Header Pinout

Target board connection via JTAG, AS, PS interfaces. The figure 1, 2, and 3 below shows the header pinouts of different interfaces.

Figure 1. JTAG header pinout

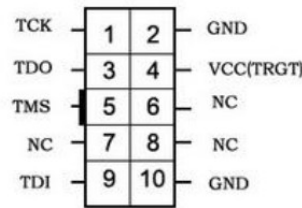


Figure 2. AS header pinout


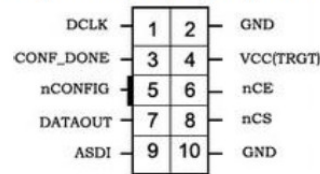


Figure 3. PS header pinout

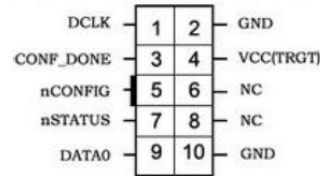

© 2090 Waveshare Electronics. All rights reserved.

Owned by Waveshare International Ltd.

Thank you for choosing our products!
If you have any question or suggestion, please contact us via email: service@wvshare.com